


Zones for Assessment of Vibration Severity in mm/s – eff Evaluated for Machines Installed at Site (Following ISO 10816 – 3)

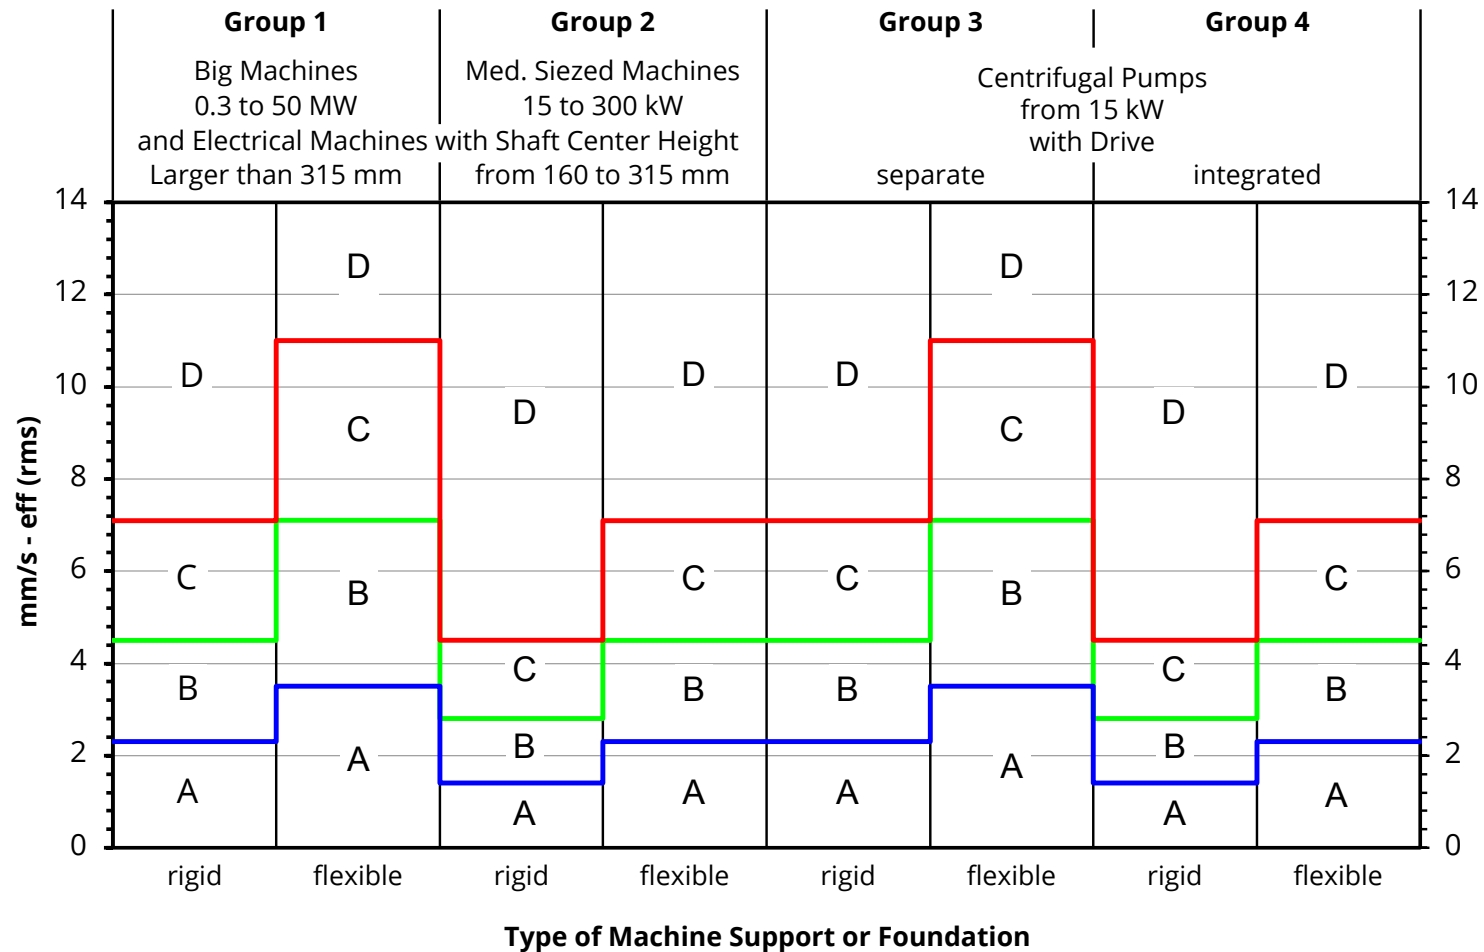

Zones: A = New Machine, B = Applicable for Continuous Operation C = Stop in Near Future, D = Dangerous